


- CX-WC14AXFMPS EQUIPMENT PACKAGE:**
- 1 CX-EMF2PS (60-40E034) - CABINET FOR MULTIFUNCTION RELAY & PS MODULE
 - 2 CM-2520/4855SE1 - "PUSH TO OPEN" AND "PUSH TO LOCK" COMBO SWITCH, WITH ENCLOSURE AND SIGN x 2
 - 3 CM-45/455SE1 - 4 1/2" ILLUMINATED PUSH PLATE WITH ENCLOSURE AND SIGN x 2
 - 4 CX-MDA - MAGNETIC DOOR CONTACT x 2
 - 5 CX-ED2079 - GRADE 2 UNIVERSAL ELECTRIC STRIKE x 2
- ADDITIONAL PARTS REQUIRED BUT NOT INCLUDED WITH THE CX-WC14AXFMPS:**
- 6 DOOR OPERATOR - SUPPLIED BY OTHERS X 2

SYSTEM OPERATION

- CX-WC14AXFMPS OPERATION:**
- A. THE DOORS ARE NORMALLY CLOSED AND UNLOCKED.
 - B. THE EXTERIOR 'PUSH TO OPEN' AURA ILLUMINATED PUSH PLATE SWITCHES OUTER RINGS ARE GREEN INDICATING THE RESTROOM IS VACANT.
 - C. PRESSING EITHER 'PUSH TO OPEN' SWITCH WILL OPEN THE RESPECTIVE DOOR.
 - D. ONCE THE DOOR IS CLOSED, PRESSING THE 'PUSH TO LOCK' ON THE COMBO PUSH PLATE SWITCH WILL LOCK THE DOOR.
 - E. THE COMBO SWITCH OUTER RING WILL GLOW RED INDICATING THE DOORS ARE LOCKED.
 - F. THE EXTERIOR AURA™ ILLUMINATED PUSH PLATE RINGS WILL TURN RED INDICATING THE RESTROOM IS OCCUPIED.
 - G. PRESSING THE 'PUSH TO OPEN' ON THE COMBO SWITCH WILL OPEN THE RESPECTIVE DOOR AND RESET THE SYSTEM. AURA™ ILLUMINATED PUSH PLATE SWITCHES WILL GLOW GREEN INDICATING THE RESTROOM IS VACANT.
 - H. IF THE DOOR IS OPENED MANUALLY TO EXIT THE RESTROOM, THE OVERHEAD MAGNETIC CONTACT SWITCH RESETS THE SYSTEM.

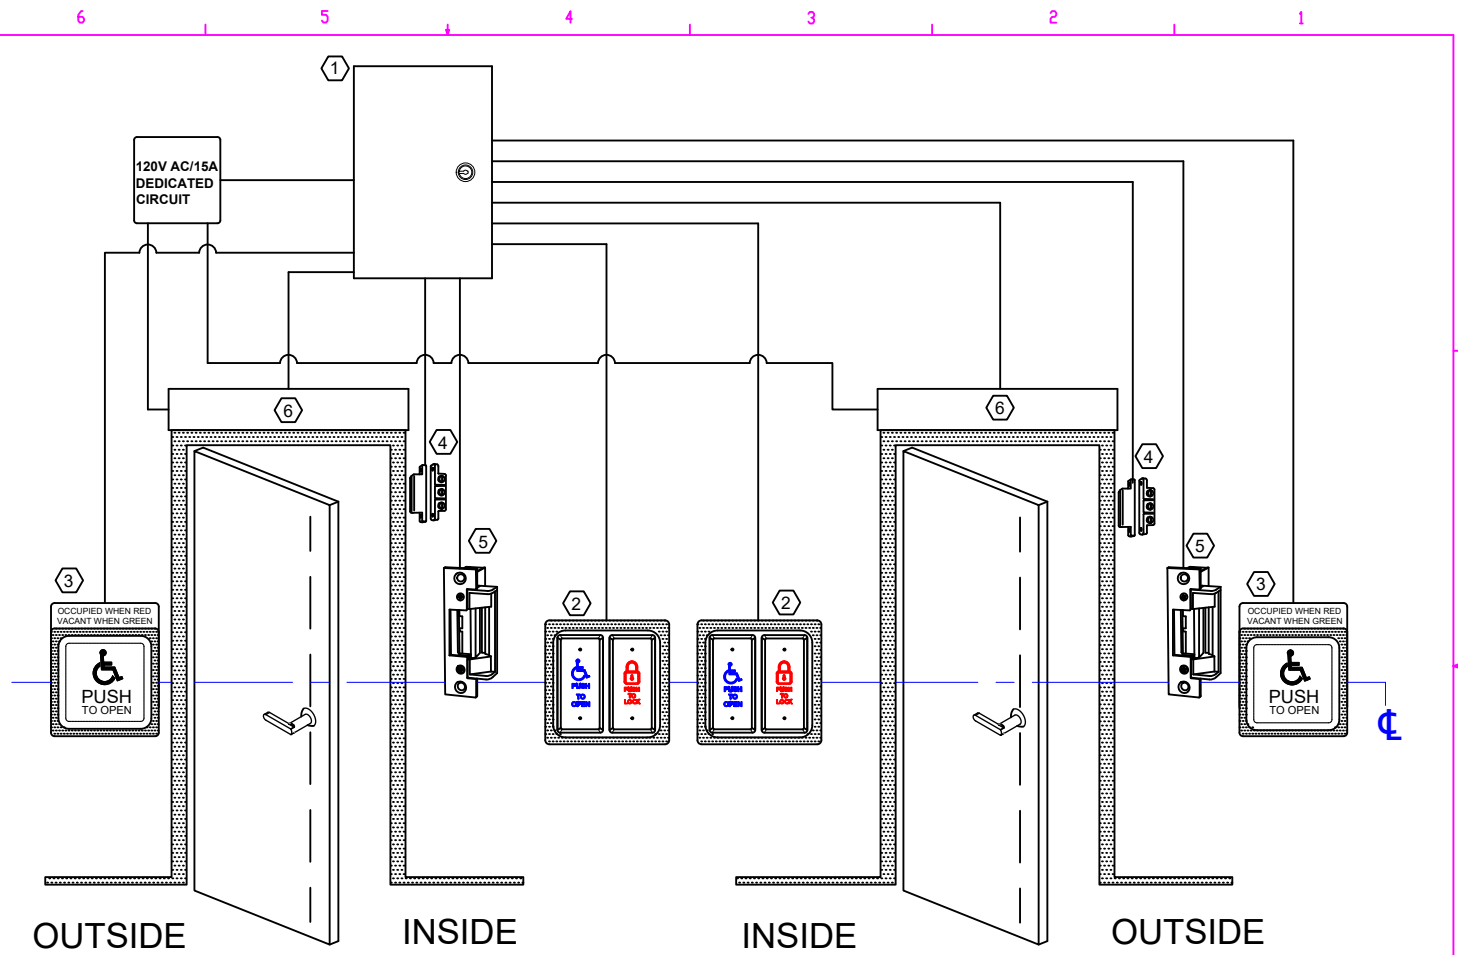

CAMDEN DOOR CONTROLS			5502 Timberlea Blvd. Mississauga, ON Canada Tel: (905) 366-3377 www.camdencontrols.com		L4W 2T7
DRAWN	NAME	DATE	TITLE:		
CHECKED	A.OLISA	MAR-20	BARRIER FREE DOOR CONTROL AND EMERGENCY		
ENG APPR.			NORMALLY UNSECURED		
MFG APPR.			(CX-WC14AXFM-PS)		
QA			SIZE	DWG. NO.	REV
COMMENTS:			CUST.	CX-WC14AXFM-PS_Cad.DWG	
			SCALE: N/A	SHEET 1 OF 1	