

NOTES: REF SPEC # CXWC13AXSM-PS

CX-WC13AXSM-PS EQUIPMENT PACKAGE:

- 1 CX-33PS (60-40E033) - POWER SUPPLY CABINET WITH A CX-TRX-4024 - 40VA, 24 VAC TRANSFORMER
- 2 CM-2520/4854SE1 "PUSH TO OPEN" AND "PUSH TO LOCK" COMBO SWITCH, WITH ENCLOSURE AND SIGN
- 3 CM-45/454SE1 - 4 1/2" ILLUMINATED PUSH PLATE WITH ENCLOSURE AND SIGN
- 4 CX-MDA - MAGNETIC DOOR CONTACT
- 5 CX-ED2079 - GRADE2 UNIVERSAL ELECTRIC STRIKE


ADDITIONAL PARTS REQUIRED BUT NOT INCLUDED WITH THE CX-WC13XSM-PS:

- 6 DOOR OPERATOR - SUPPLIED BY OTHERS

SYSTEM OPERATION

CX-WC13AXSM-PS OPERATION:

- A. THE DOOR IS NORMALLY CLOSED AND UNLOCKED.
- B. PRESSING THE EXTERIOR 'PUSH TO OPEN' AURA PUSH PLATE OPENS THE DOOR.
- C. ONCE INSIDE AND THE DOOR IS CLOSED, PRESSING THE ILLUMINATED 'PUSH TO LOCK' AURA PUSH PLATE, CHANGES THE COLOR TO RED AND LOCKS THE DOOR.
- D. TO EXIT, PRESS THE INTERIOR PUSH PLATE TO UNLOCK THE DOOR AND RESET THE SYSTEM.
- E. THE 'PUSH TO LOCK' AURA™ PUSH PLATE SWITCH ILLUMINATED RING TURNS GREEN AND THE EXTERIOR 'PUSH TO OPEN' AURA™ PUSH PLATE OUTER RING TURNS GREEN.
- F. IF THE DOOR IS OPENED MANUALLY TO EXIT THE RESTROOM, THE OVERHEAD MAGNETIC CONTACT SWITCH RESETS THE SYSTEM.

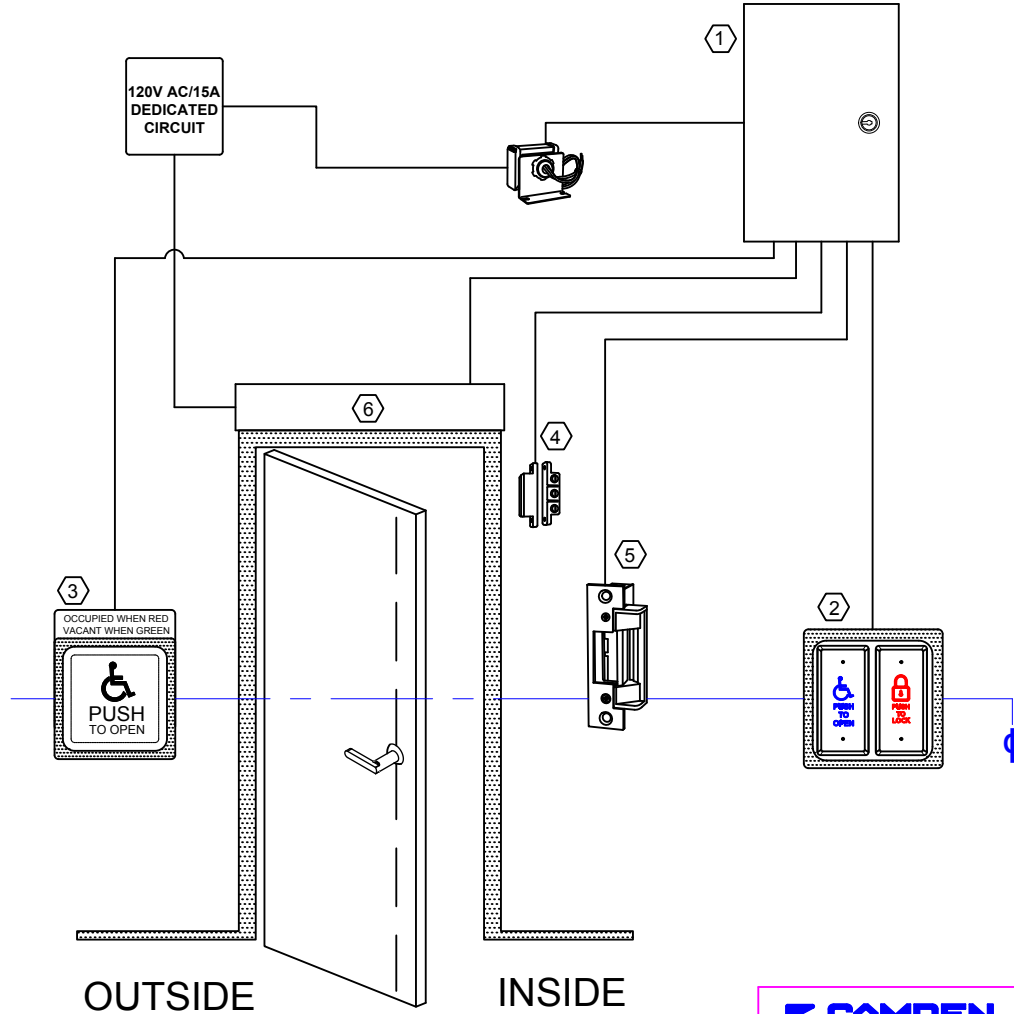

		5502 Timberlea Blvd. Mississauga, ON Canada L4W 2T7 Tel: (905) 366-3377 www.camdencontrols.com	
		TITLE: BARRIER FREE DOOR CONTROL NORMALLY UNSECURED (CX-WC13AXSM-PS)	
DRAWN A.OLISA	DATE FEB-20	SIZE DWG. NO. B CX-WC13AXSM-PS_Cad.DWG	
CHECKED ENG APPR. MFG APPR. Q.A. COMMENTS:	SCALE: N/A		REV SHEET 1 OF 1